

IP Power Quick Installation

V B.00

0. Before Getting Started

Before getting started, please check the IP Power package and your system to meets the requirements.

Package Contents


- IP Power & Quick installation (QI)
- Option: Power cord or Network cable

Minimum System Requirements

- PC with Web browser and ONE network card (need to disable the other network cards as using IPEDIT)
- Router w/ DHCP enable

1. Hardware Installation

Connect the Power cable to IP Power, connect the network cable (RJ45) from IP Power to your DHCP Router and connect the control device to the 4 outputs . Turn on the power switch and you will hear one short beep after 3 seconds which means the boot up successfully .

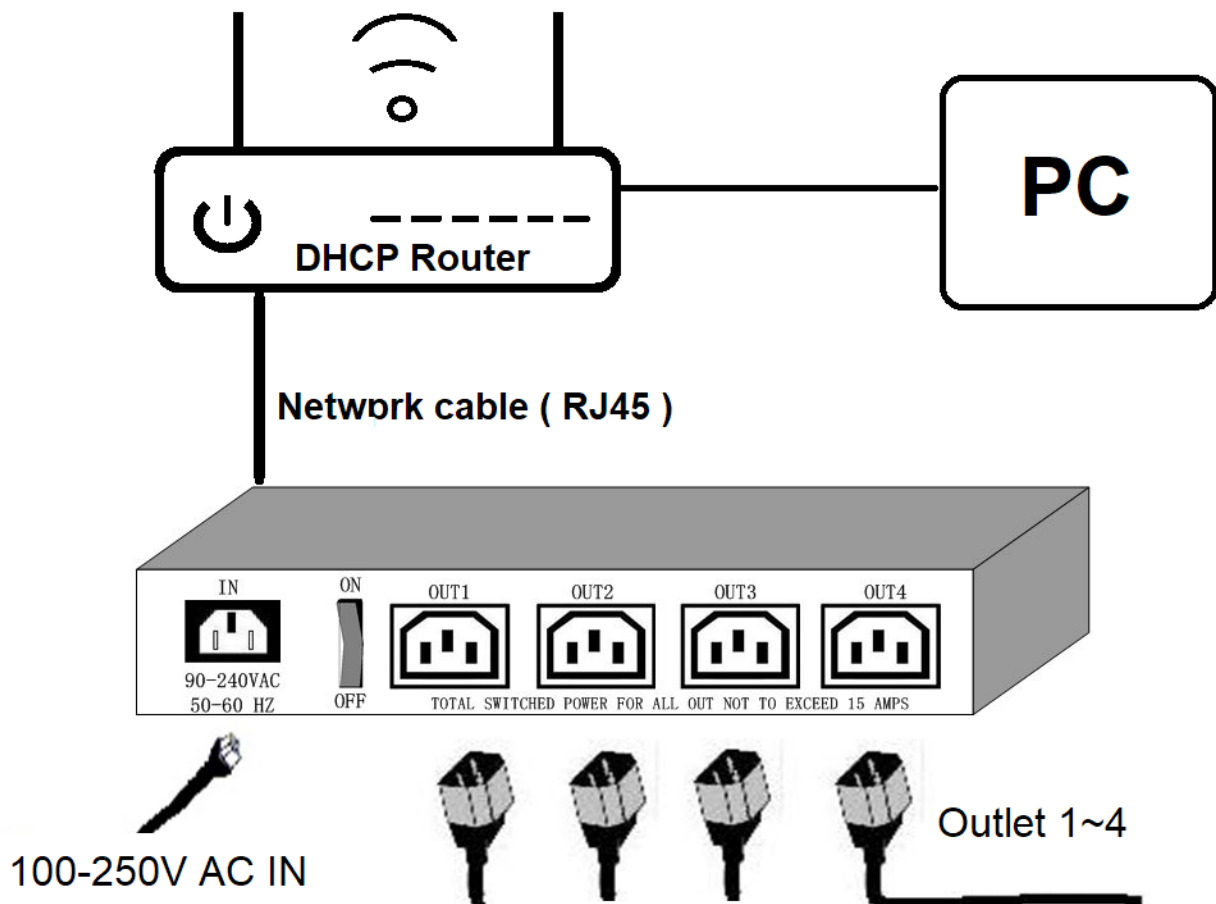

2. Software introduction

Please go to our online CD site www.aviosys.com/cd to download the product manual and the IP Search software tool : IPEDIT.exe . Execute IPEDIT to find 9258 dynamic IP address easily. You can find IP address in this Ethernet . **IPEDIT** show the information for reference. Double click the IP address, you can get in the login site of webpage.

Please type **admin** in the username section **12345678** in the password section

- * The IP of IP Power will be assigned by DHCP of your Router / Switch .
- * If did not get IP address from IPEDT.exe , Please check if there are more than one Network Card , include dynamic one , and disable those network function . Please also turn off the firewall and the anti-virus software .
- * Hardware Reset : Press turn of the power switch, press the two reset button for 7 seconds and there are 3 short beeps show the boot up successful.

● Free APPs & Online CD : Android



, iOS



& CD

